Installing DIY Backlight in 9x Transmitter

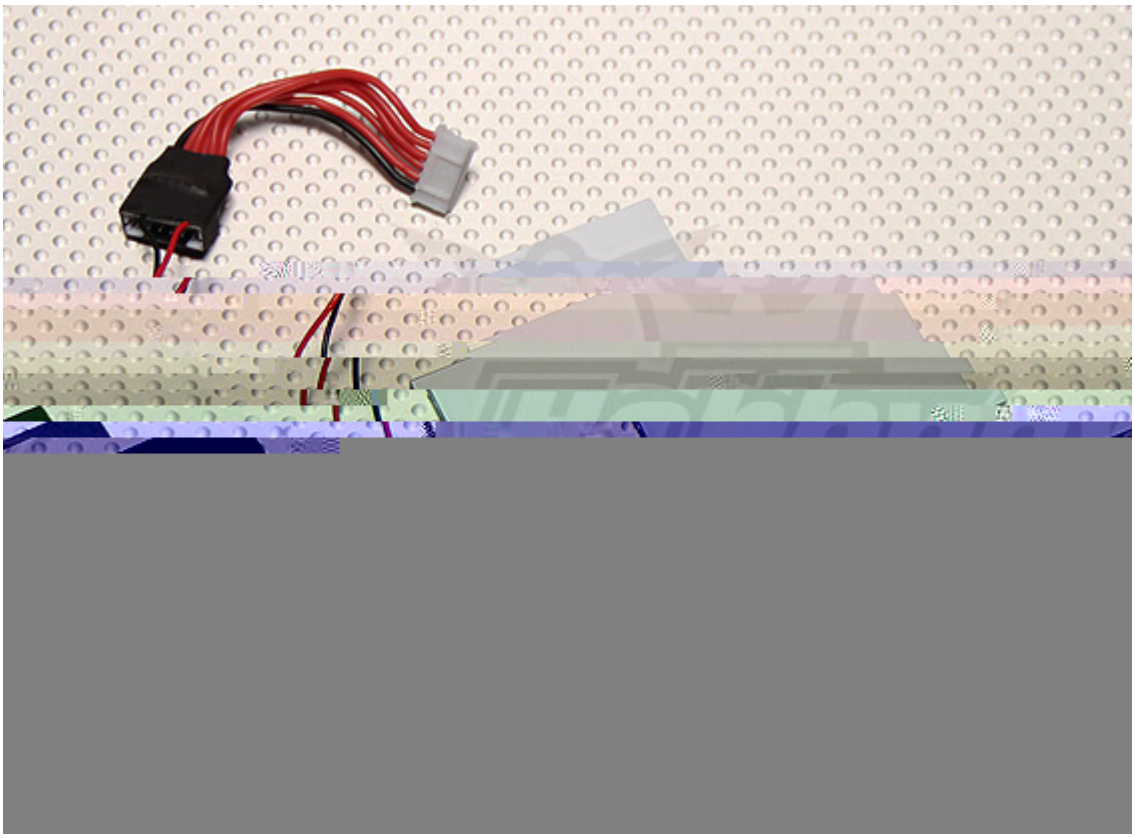

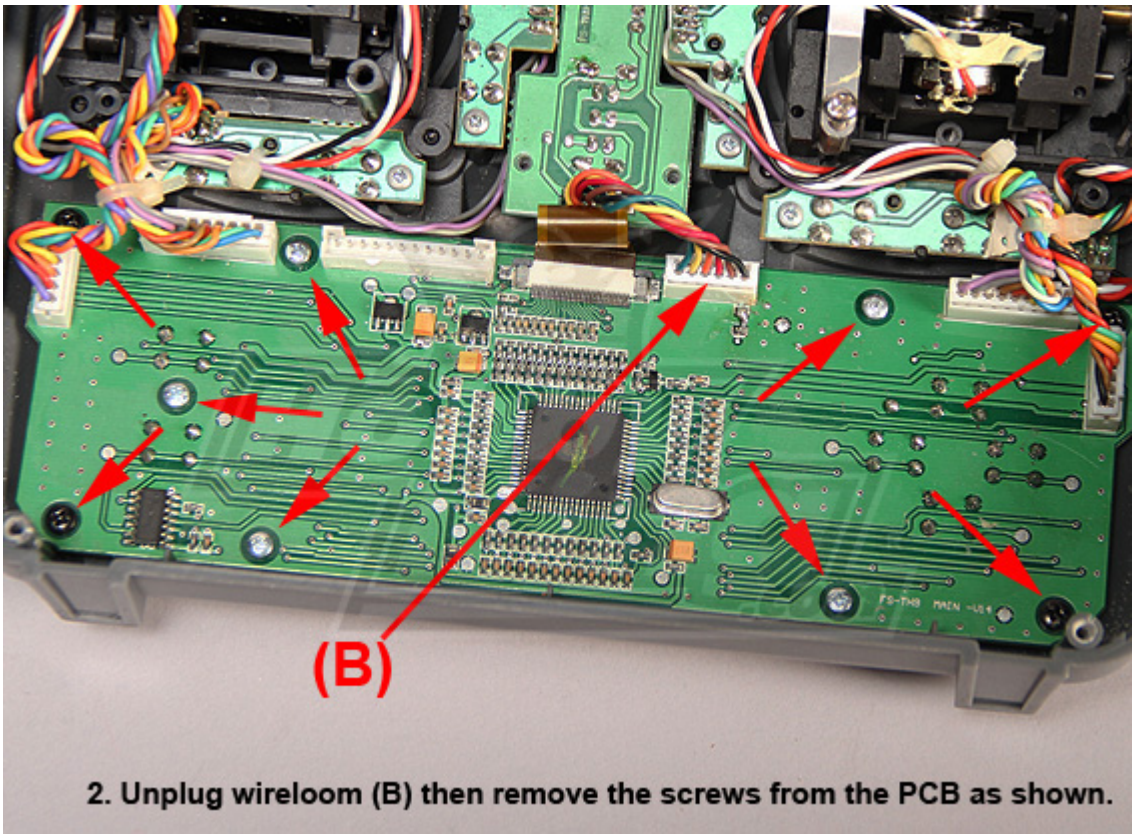

2. Unplug wireloom (B) then remove the screws from the PCB as shown.

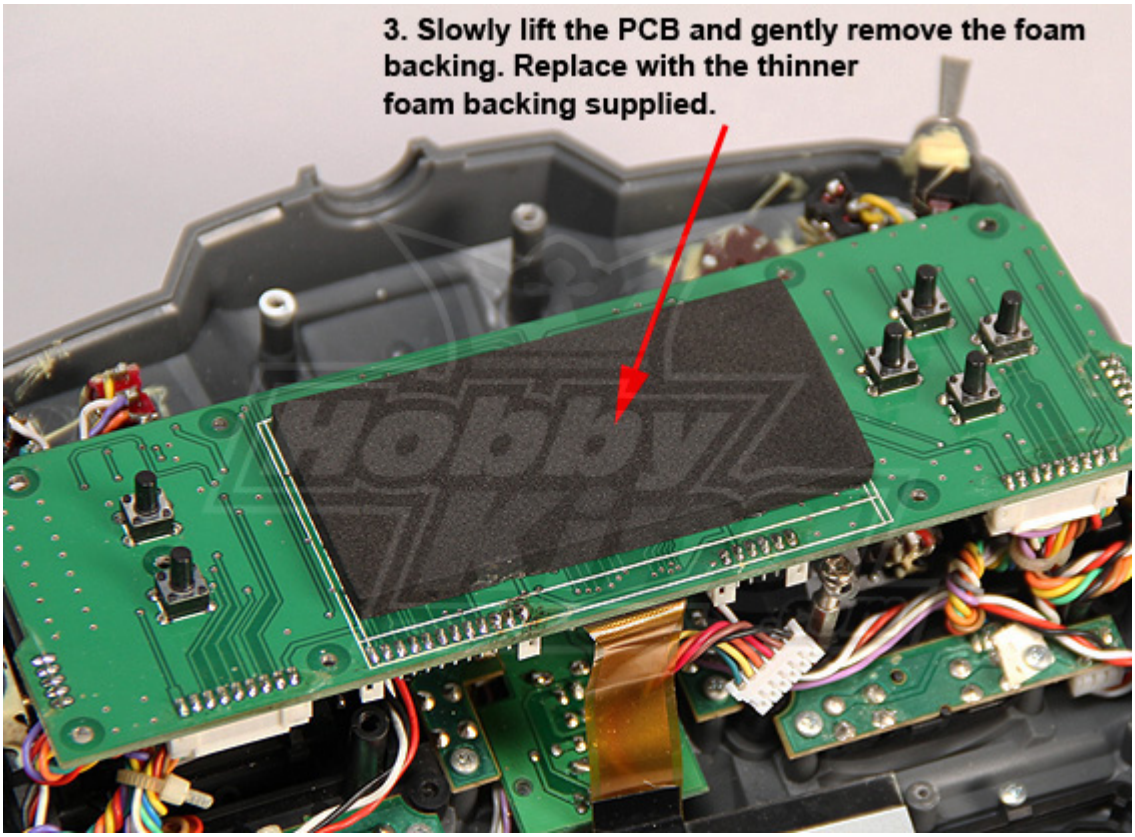

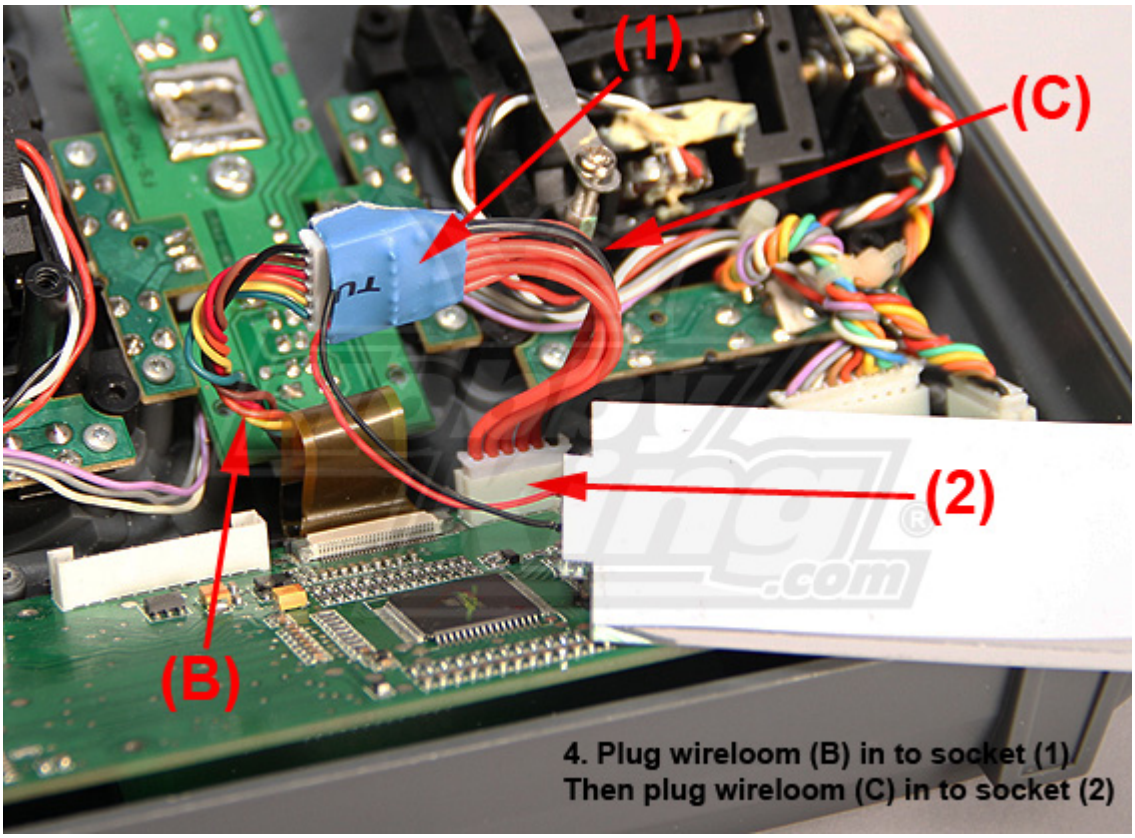

4. Plug wireloom (B) in to socket (1)
Then plug wireloom (C) in to socket (2)

5. Place the backlight panel above the LCD.

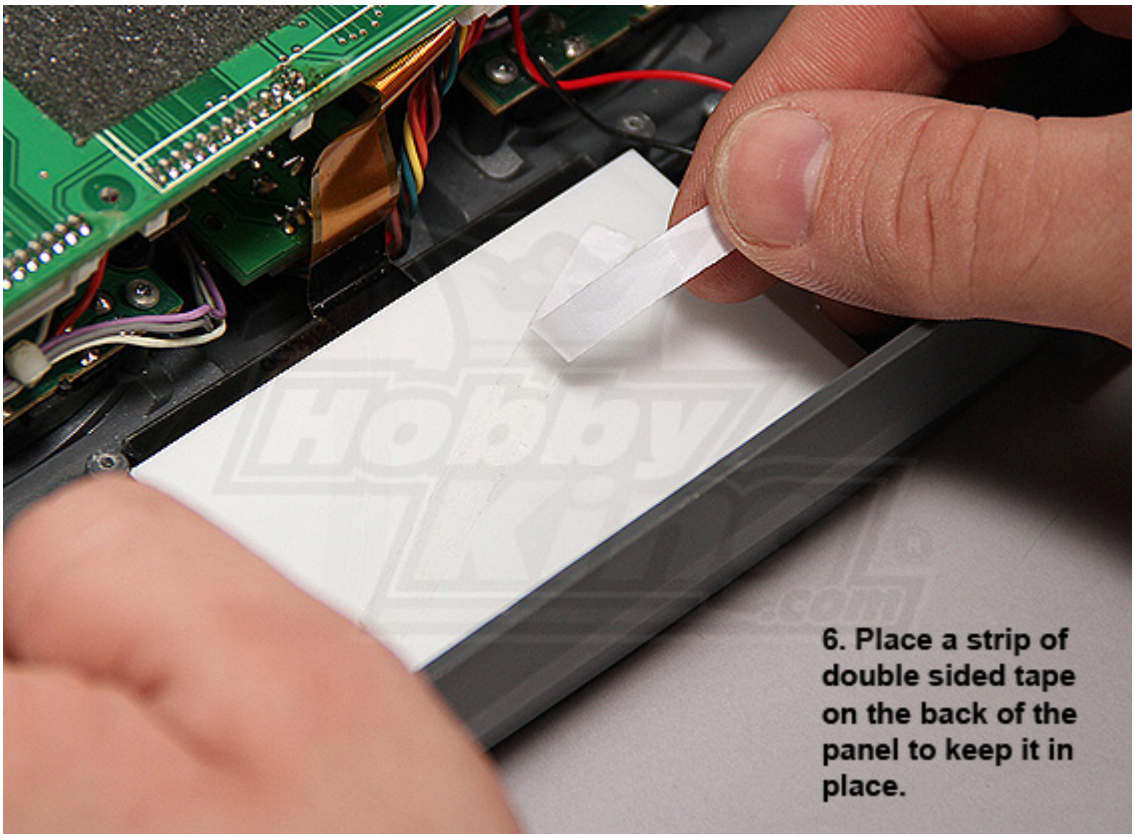
6. Place a strip of double sided tape on the back of the panel to keep it in place.

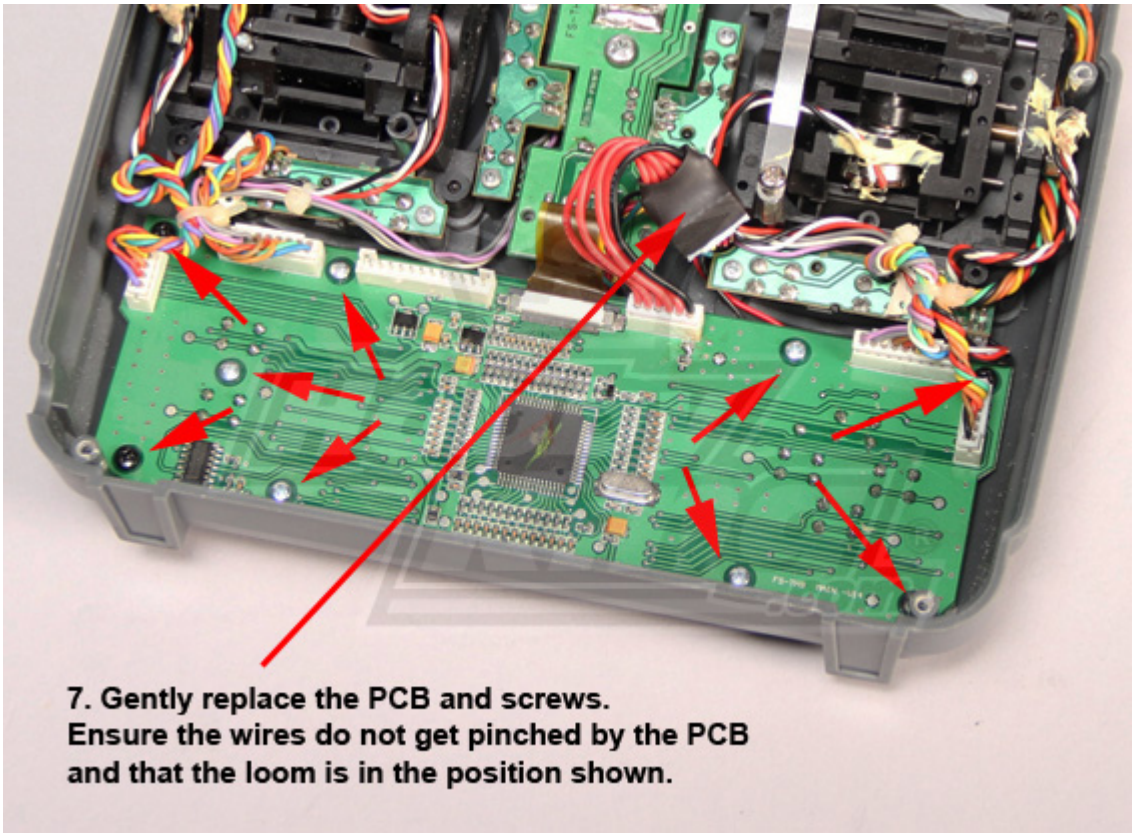
7. Gently replace the PCB and screws.
Ensure the wires do not get pinched by the PCB and that the loom is in the position shown.

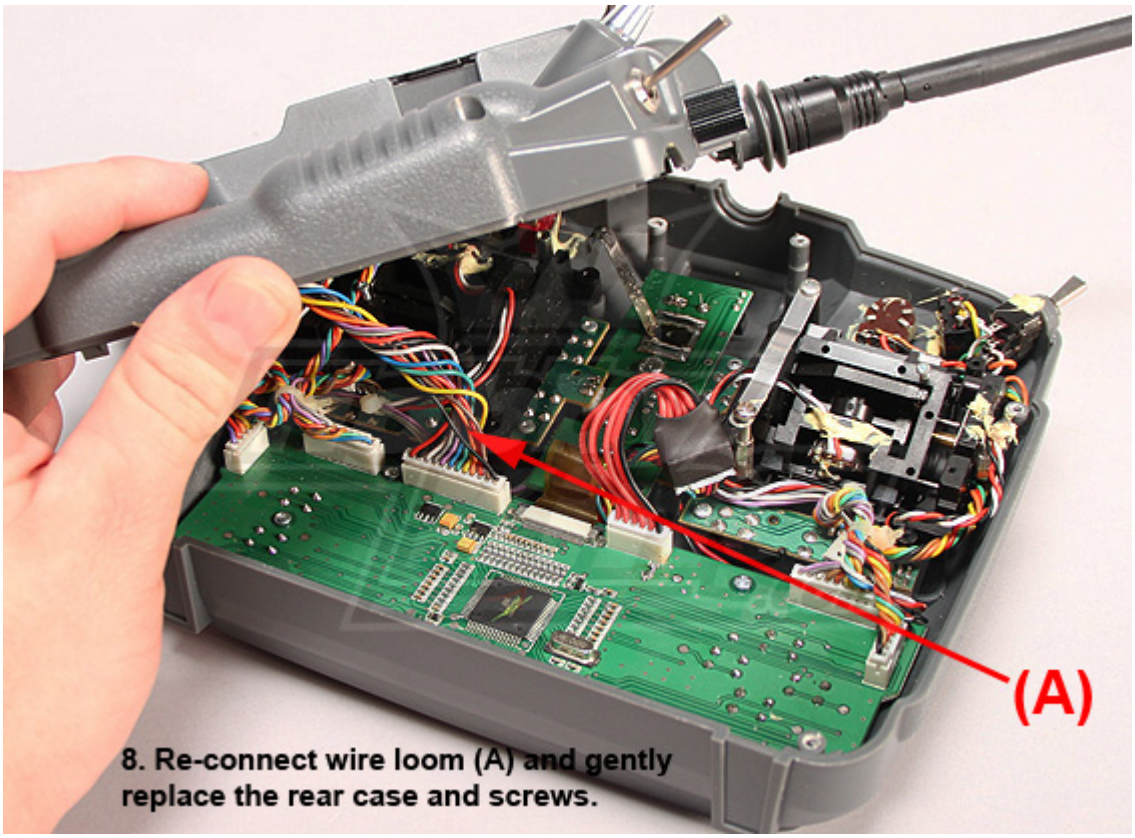

8. Re-connect wire loom (A) and gently replace the rear case and screws.

9. Switch on the radio and enjoy your very own Turnigy 9X Backlit Transmitter!